

PCjr QuickSilver Cartridge installation instructions.

CARTRIDGE STORAGE:

- Keep the QuickSilver Cartridge dry.
- Do not place the cartridge in direct sunlight.
- Do not subject the cartridge to intense heat.

CARTRIDGE INSTALLATION:

(For excellent diagrams refer to the 'CARTRIDGES' section in your 'Guide to Operations' manual.)

1. Turn the system power off. The QuickSilver Cartridge should only be inserted with the power turned off. This is a good procedure to use with ALL your cartridges.
2. Hold the cartridge with the label facing so that you can read it.
3. Firmly slide the QuickSilver Cartridge into either slot until it 'snaps' into place.

CARTRIDGE REMOVAL:

1. Turn the system power off. The QuickSilver Cartridge should only be removed with the power turned off. This is a good procedure to use with ALL your cartridges.
2. Pull the QuickSilver Cartridge out of the slot.

LIMITED WARRANTY

Synectics Software & Systems warrants that each QuickSilver Cartridge is free from defects in material and workmanship and agrees to repair or replace the assembly which under normal installation and use discloses such defect, provided the assembly is delivered by the original purchaser to Synectics Software & Systems for examination within 90 days of the date of purchase.

This warranty does not extend to any assembly which has been subjected to misuse, abuse, neglect, accident, improper installation or use in violation of instructions furnished by us nor to any QuickSilver assembly which may have been tampered with, altered, or repaired outside of Synectics Software & Systems.

This warranty is in lieu of all other warranties expressed or implied, and no one is authorized to assume any liability on behalf of Synectics Software & Systems or impose any obligation on it in connection with the sale, other than as outlined above.

Return any defective QuickSilver Cartridge with a copy of your sales receipt, to:

Synectics Software & Systems
P.O. Box 4931
Boise, ID 83711-4931