



8. Note the orientation of the ribbon cable socket in the plug, because you will have to reconnect the cable in the next step. Remove the RS232 ribbon cable socket from the plug on the Second Serial board.
9. Feed the connector from the outside of the PCjr case through the rectangular hole marked 'M' for modem. Plug the cable back into the Second Serial card, being careful to orient the cable properly: the cable must come out toward the bottom of the board, and the rectangular orientation plug on the ribbon cable socket should plug into the rectangular notch in the printed circuit board plug (on the side of the plug closest to the bottom of the board).

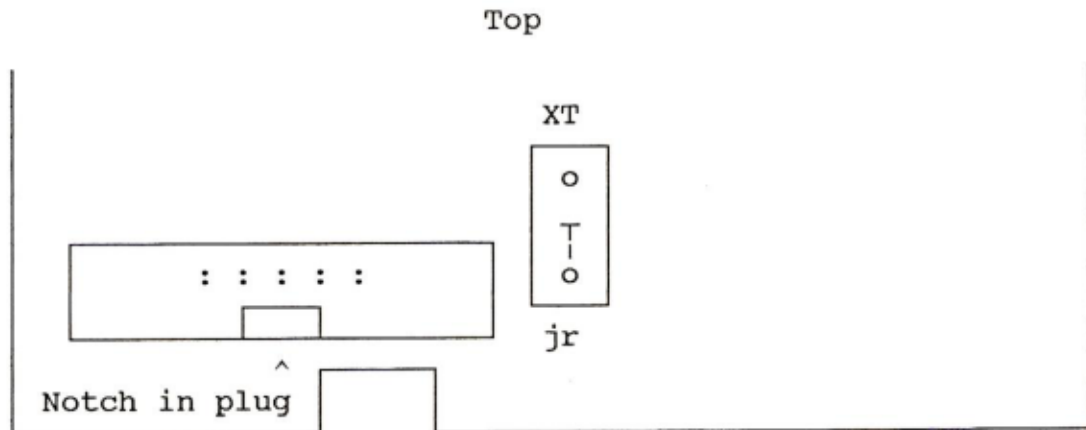

Bottom

Put the ribbon cable socket into the board's plug with the ribbon cable coming out of the bottom.

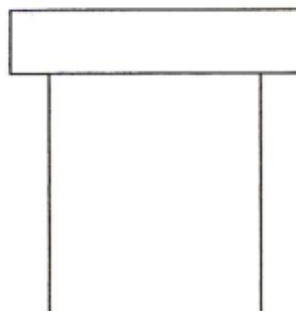

<== The rectangular orientation plug is under the ribbon cable on this side of the socket.

<== Ribbon cable

11. Reconnect the power and signal cables to the diskette drive. (See the 'Guide to Operations' manual)
12. Put the top cover back onto the PCjr. (See the 'Guide to Operations' manual)
13. Plug the power cords back into the wall sockets.

HARDWARE NOTES:

Only attach or remove cables from the Second Serial board when the power is turned off. This is a good procedure to follow with all of the devices attached to your PCjr.

SECOND SERIAL BOARD LIMITED WARRANTY

Synectics Software & Systems warrants that each Second Serial board is free from defects in material and workmanship and agrees to repair or replace the assembly which under normal installation and use discloses such defect, provided the assembly is delivered by the original purchaser to Synectics Software & Systems for examination within 1 year of the date of purchase.

This warranty does not extend to any assembly which has been subjected to misuse, abuse, neglect, accident, improper installation or use in violation of instructions furnished by us nor to any Second Serial board assembly which may have been tampered with, altered, or repaired outside of Synectics Software & Systems.

This warranty is in lieu of all other warranties expressed or implied, and no one is authorized to assume any liability on behalf of Synectics Software & Systems or impose any obligation on it in connection with the sale, other than as outlined above.

Warranty service may be obtained by returning a Second Serial board with a copy of your sales receipt to:

Synectics Software & Systems
P.O. Box 4931
Boise, ID 83711-4931